


Type of adjustment set : M16 intermediate hex-rod


M16中間桿調整組

Adjust the length by section (B). After the length setting is completed, tighten nut (A), and then tighten nut (C) finally.

使用 (B) 部份調整，完成後再鎖緊 (A)，最後鎖緊 (C)

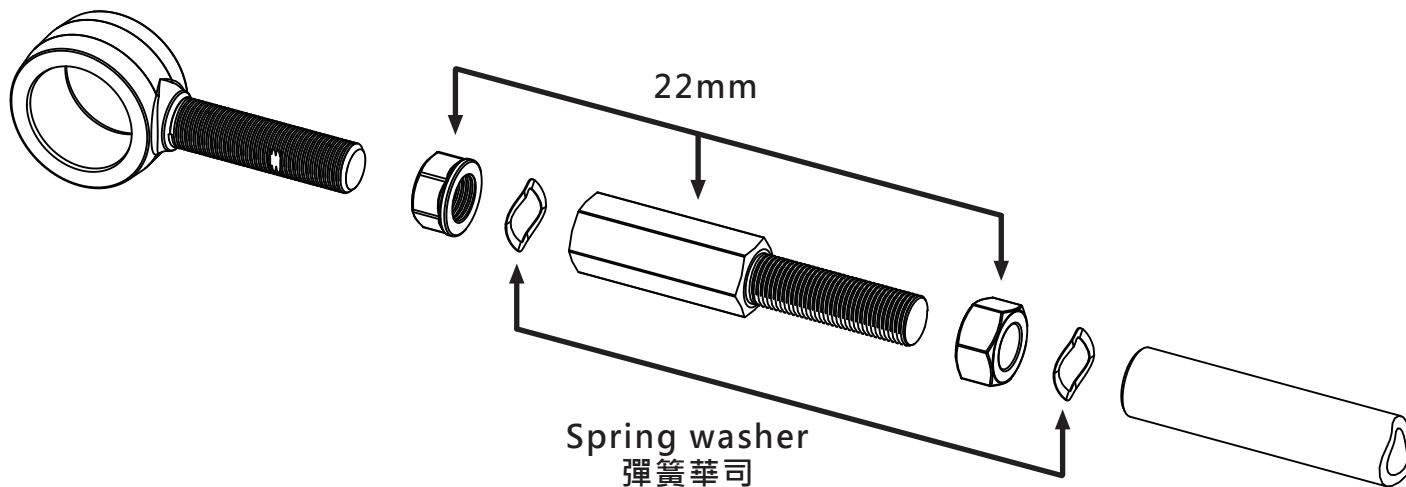

※ Attention! Pillow ball bush and Ball joint must be kept in the middle position  
注意！魚眼及和尚頭必須保持在置中位置

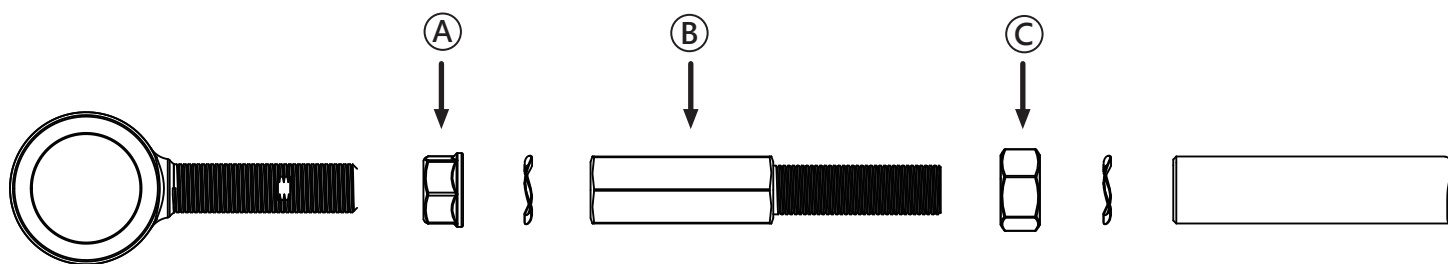

※ Safety adjustment length: Within 40mm  
調整安全長度40mm以內

