


## Application 適用車型

Toyota 86/Scion FR-S '12-present  
Subaru BRZ '12-present

LHD model only  
僅適用左駕車型

## Components 內含配件

① Strut brace 引擎室拉桿總成	1PCS
② Brake cylinder stopper 煞車助頂器	1PCS
③ Nut 螺帽 ( M10x1.25-14x9.5 )	2PCS

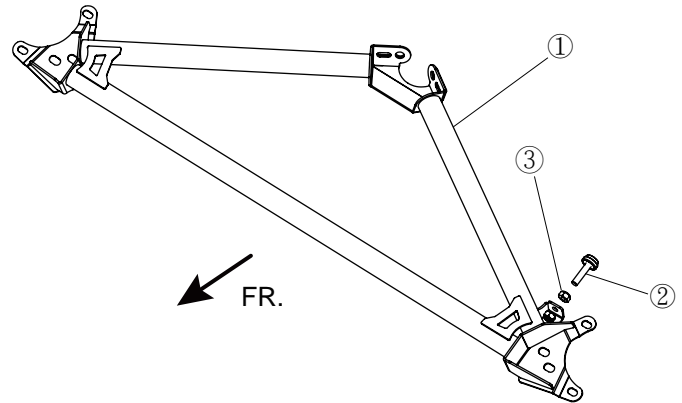

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. With the vehicle on a level surface, remove the factory strut bars and the inner 4 nuts of strut mounts on both sides.

將車輛停放在平地上，接著拆卸原廠配備之引擎室拉桿以及兩側避震器上座內側共4個螺帽。

2. Install ② Brake cylinder stopper on to the bracket of ① Strut brace using ③ Nuts, then position the brace over strut mounts and tighten all the nuts and bolts back.

使用配件 ③ 螺帽 將 ② 煞車助頂器 安裝於 ① 引擎室拉桿 上，並將拉桿放置在避震器上座後鎖回所有螺帽及螺絲。

3. After installation, adjust the nuts on the stopper to strut the brake cylinder.

安裝完成後調整煞車助頂器之螺帽，使助頂器能支撐於煞車總泵。

Illustration of installed state  
完成示意圖

