


Application 適用車型

Honda Civic 9th FB '12-16

Components 內含配件

① Strut brace 引擎室拉桿總成	1PCS
Bolt 螺絲 (M10x1.5x75)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

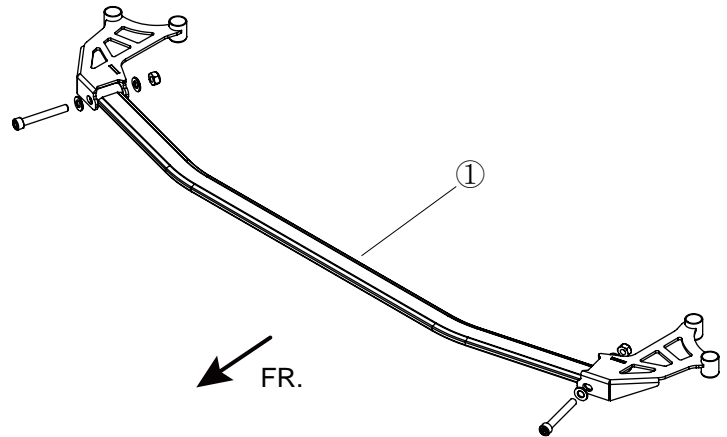

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. With the vehicle on a level surface, remove covers on the cowl panel to get access to the strut tower.
將車輛停放於平地上，接著拆卸雨刷蓋板上兩邊的塑膠蓋後找到避震塔。
2. Remove the forward and outer-most nuts of the strut mounts through the opening of removed covers on both sides. Then Position ① Strut brace over the strut mounts.
從移除的塑膠蓋之開口拆卸兩側避震器上座最朝前及最外側的螺帽，再將 ①引擎室拉桿 放置於避震器上座。
3. Tighten the nuts to the strut mounts and install the round plastic covers back to cowl panel.
鎖回避震器上座螺帽並裝回雨刷蓋板上方的圓形塑膠蓋。

