


### Application 適用車型

Honda CR-V '17-present

### Components 內含配件

- ① 4 point brace 井字拉桿 1PCS

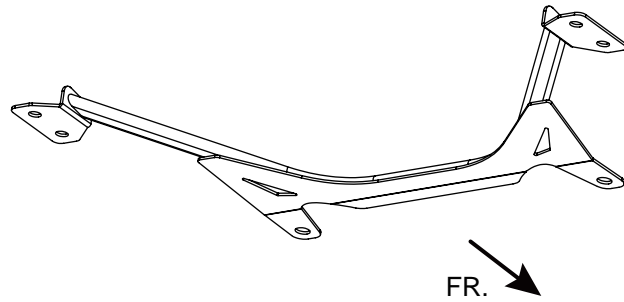

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Jack up the vehicle to access the front sub-frame.  
將車輛升起後找到前端副車架。
2. Remove the two bolts from the front sub-frame and the four bolts from the frame rails. (See arrows in figure1)  
拆卸前副車架的兩個螺絲以及大樑上的四個螺絲。  
(請參考圖表一箭頭位置)
3. Place ① 4 point brace on the vehicle. (See figure 2)  
將 ① 井字拉桿 置於前副車架及車身上。  
(請參考圖表二)
4. Once in place, reinstall the removed bolts to the front sub-frame to secure the brace.  
拉桿固定完成後，即可裝回已拆下的副車架螺絲，使拉桿固定於大樑及副車架。

