

Installation Instructions

安裝說明書

REAR STRUT / HARNESS BRACE

後廂/多點式安全帶固定拉桿

#Q0966

Components 內含配件



- ① Center bar 中央拉桿1pcs
- ② Lower support bar 下支撐桿.....2pcs
- ③ Lower support bar bracket 下支撐桿支架...2pcs
- ④ Bolt - Flange 凸緣螺絲 (M12x1.25-60).....4pcs
- ⑤ Nut - Flange 凸緣螺帽 (M12x1.25-17x11)..4pcs
- ⑥ Bolt - Flange 凸緣螺絲 (M10x1.25-30).....2pcs
- ⑦ Nut plate 螺帽鎖片 (M10x1.25).....2pcs
- ⑧ Spacer 墊片 (22x10.5x6).....2pcs

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove rear trunk trim panel.
將行李箱內飾板及底板拆除。
2. Remove factory rear seat backrest support bracket. Keep the original M8 bolts.
將原廠的後座椅背扣件支架拆除。請保留原廠的M8螺絲。
3. Install the center bar to vehicle using the original M8 bolts.
使用原廠的M8螺絲。將中央拉桿安裝至車輛。
4. Install the lower support bar brackets to vehicle using supplied M10 bolts, spacers and nut plates.
(Insert the nut plates from the bottom)
使用M10螺絲、墊片及螺帽鎖片。將下支撐桿支架安裝至車輛。
(螺帽鎖片從下方置入對鎖)

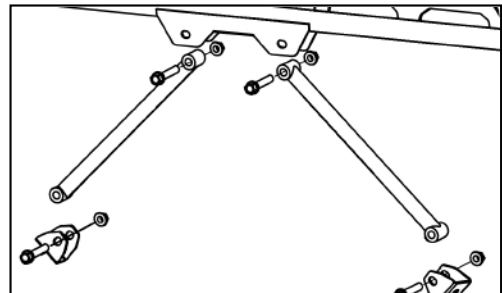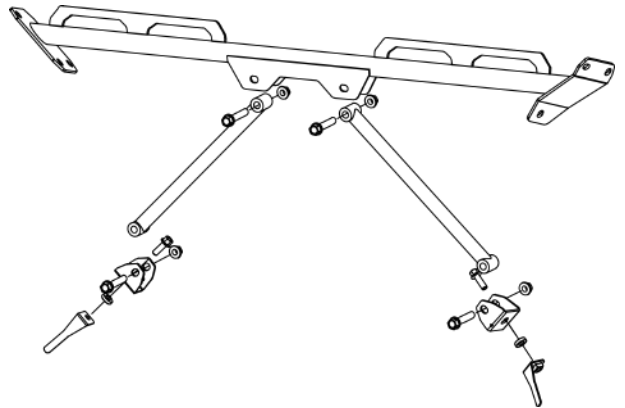

5. Install the lower support bars to the brackets and center bar using supplied M12 hardware.
使用M12螺絲及螺帽。將下支撐桿安裝至支架以及中央拉桿上。
6. Cut on the trunk inner trim and floor panel required to reinstall the trim and floor panel to avoid interference on the brace.
若要將車廂內飾板及底板裝回車輛。須進行裁切避免與桿身造成干涉。



Illustration of installed state 安裝完成示意圖 ▼