

Installation Instructions

安裝說明書

FRONT RADIATOR BRACE

前水箱架拉桿


#Q0119

Application 適用車型

Toyota Prius '15-present

Components 內含配件

- | | |
|-----------------------|------|
| ① Brace 拉桿桿身 | 1PCS |
| ② Bolt 螺絲 (M6x1.0x20) | 2PCS |

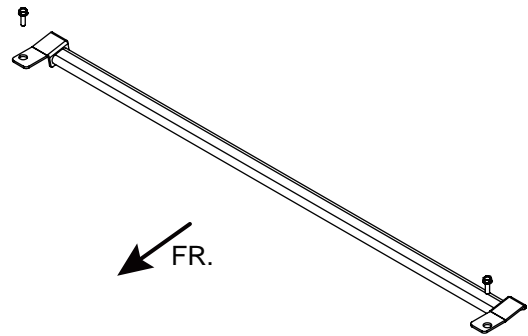

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the plastic cover to access the radiator support.
(See figure 1)
拆卸水箱架上方的塑膠蓋板。(請參考圖一)
2. Remove the bolts from the radiator support on both sides.
(See figure 2)
拆卸水箱架兩側上方的螺絲。(請參考圖二)
3. Position ①Brace to the radiator support, then install the supplied ②Bolts to secure the brace. (See figure 3)
安裝 ①桿身，並使用配件 ②螺絲 將拉桿前端固定於支架。(請參考圖三)
4. Reinstall the radiator support cover after installation.
完成後將水箱架蓋板裝回。

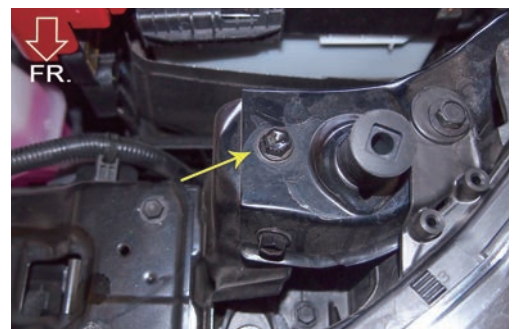


Illustration of installed state
安裝完成示意圖