


## Application 適用車型

Mini Countryman R60 '10-16  
Mini Paceman R61 '12-16

## Components 內含配件

|                           |      |
|---------------------------|------|
| ① Strut Brace 引擎室拉桿總成     | 1PCS |
| Bolt 螺絲 ( M10x1.5x70 )    | 2PCS |
| Nut 螺帽 ( M10x1.5-17x10 )  | 2PCS |
| Washer 華司 ( 20.8x10.7x2 ) | 4PCS |

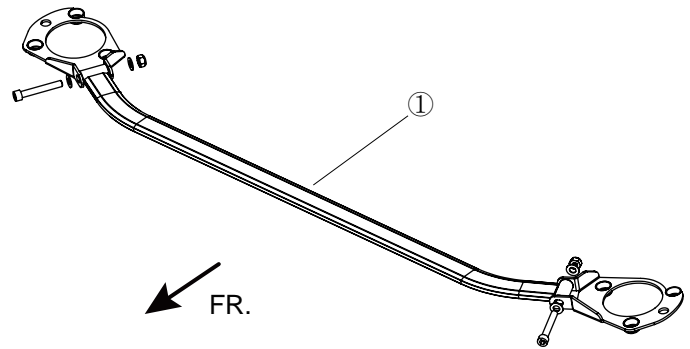

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. With the vehicle on a level surface, remove the 6 nuts of strut mounts on both sides.  
將車輛停放在平地上，接著拆卸兩側避震器上座共6個螺絲。
2. Position ① Strut brace over the mounts and tighten the nuts back.  
將 ① 引擎室拉桿 放置在避震器上座並鎖回上座螺絲。
3. Illustration of installed state.  
完成示意圖

