Installation Instructions

安裝說明書


FR. LOWER 4 POINTS BRACE 前下井字拉桿 #Q0126

Application 適用車型

Suzuki Swift '17-present (ZC33) Suzuki Baleno '15-present

Components 內含配件

① FR. Lower brace 前下井字拉桿 1PCS

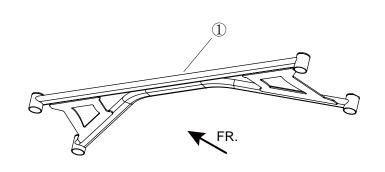

Caution 注意事項

- •Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- •Note the routing and position of wires and cables before installation. Please refer to factory manual.
- •Tighten bolts and nuts frimly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全 · 否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置,或請參考原廠手冊
- •請使用手動工具確實鎖緊螺帽及螺絲,或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle and remove the four bolts securing the rear part of front sub-frame, then attach ① FR. Lower brace to the vehicle as shown in figure 1.

將車輛升起後拆卸前副車架後端的四個螺絲,並參照圖表一將 ① 前下井字拉桿 裝上車輛。



2. Once the brace is in place, reinstall the bolts to the subframe. 將拉桿固定後,沿用原螺絲將拉桿鎖上副車架。



Illstration of installed state 完成示意圖







