


Application 適用車型

Toyota Alphard/Vellfire (GGH30) '15-Present

Components 內含配件

① Front lower brace 前下拉桿 1PCS

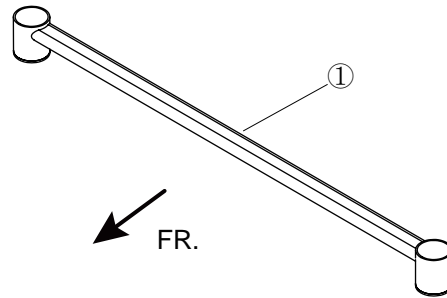

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to get access to the triangular brackets securing the front sub-frame to the chassis

將車輛升起後找到固定前副車架於底盤的三角型支架。

2. Remove the forward-most bolts of the triangular braces on both sides.

拆卸三角型支架上最朝前的螺絲。

3. Position ① Front lower brace as shown in the figures, then bolt on using the original bolts.

依照圖表置入 ①前下拉桿，並沿用原廠螺絲將拉桿鎖上。

Illustration of installed state

完成示意圖

