


Application 適用車型

Honda CR-V '17-present

Components 內含配件

① Rear sub-frame brace 後下樑拉桿

1PCS

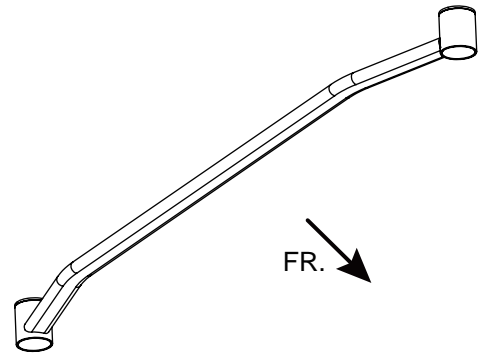

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to access the rear sub-frame.
將車輛升起後找到後端副車架。
2. Remove the two rear-most bolts securing the rear sub-frame.
(See arrows in figure1&2)
拆卸後副車架最後端的兩個螺絲。(請參考圖表一、二箭頭位置)
3. Place ①Brace on the sub-frame. (See figure 2)
將①後下樑拉桿 放置於後副車架上。
(請參考圖表二)
4. Once in place, reinstall the removed bolts to the rear sub-frame to secure the brace.
拉桿固定完成後，裝回已拆下的副車架螺絲，使拉桿固定於副車架。

