


Application 適用車型

Volvo S60/V60 '10-18

Components 內含配件

- | | |
|-------------------------|------|
| ① Brace 結構桿桿身 | 1PCS |
| ② Washer 華司 (28x12.2x5) | 4PCS |

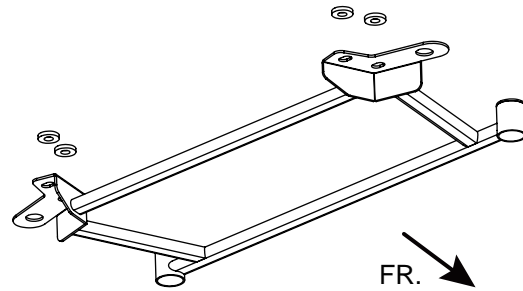

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the front sub-frame and lower control arm bushing bolts on both sides. (See figure 1)
拆卸兩側前副車架及三角架鐵套的螺絲。(請參考圖表一)
2. Place supplied ② Washers to the two rear-most holes on both sides of the brace. (See components figure & arrows in figure 2)
使用配件 ② 華司 置入桿身兩側最後端的兩個鎖孔。(請參考配件圖及圖表二箭頭)
3. Install ① Brace to the vehicle using the removed bolts. (See figure 2&3)
使用已拆下的原廠螺絲安裝 ① 結構桿桿身。(請參考圖表二、三)



Illustration of installed state
完成示意圖