


Application 適用車型

Toyota Prius '16-present

Components 內含配件

① Brace 結構桿

1PCS

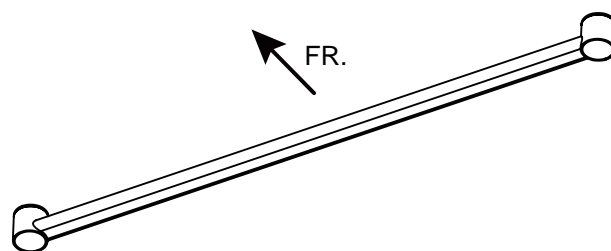

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the control arm rear bushing bolts from the front subframe on both sides. (See figure 1)
拆卸前副車架兩側的控制臂後鐵套螺絲。(參考圖表一)

2. Install **Brace** to the vehicle, then reinstall the bolts to secure the brace.
安裝 **結構桿**，並鎖回螺絲以將桿身固定。



Illustration of installed state
安裝完成示意圖