

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


FORD EUROPE FOCUS MK3
MAZDA 3 AXELA 1st BK 2003-2008 / AXELA 2nd BL 2009-2013
VOLVO S40 2nd 2004-2012 / V50 2004-2012 / C30 2006-2013
/ C70 2nd 2006-2013 / VOLVO V40 2013-on

PART NO. 7740

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Rear Sway Bar 22mm 後防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS
3. Stabilizer Bracket 防傾桿固定座 2PCS
4. Rubber Locking Ring 橡膠固定環 2PCS
5. Clamp Ring 金屬束環 2PCS
6. M12 to M10 Spacer M12轉M10墊片 4PCS

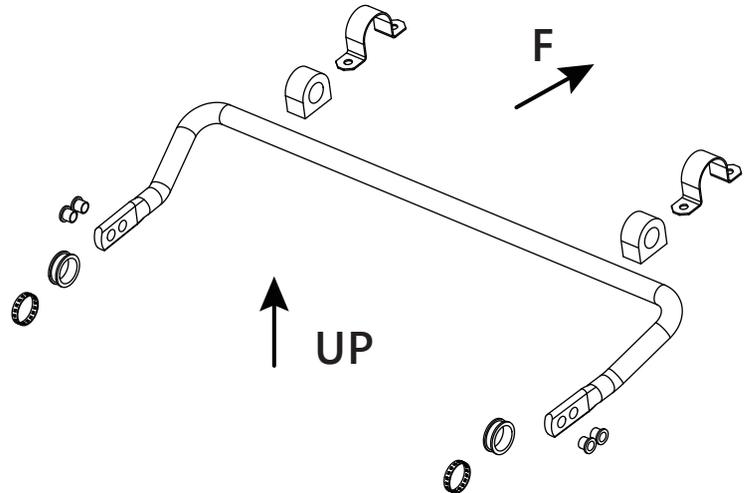

Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



Torque of bolts
螺絲鎖緊扭力：
M8-60Nm
M10-80Nm

Screw locking gel is recommended.
建議使用螺絲防鬆膠

Insert the M12 to M10 spacers into the mounting holes at both ends of sway bar.
M12轉M10墊片，安裝至李仔串鎖孔位置，對應李仔串螺絲牙M10使用



Stabilizer links of 7740K are corresponding to FORD、VOLVO and MAZDA models.
7740K附加李仔串對應FORD、VOLVO、MAZDA車系

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.
安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.
當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

