

Installation Instructions

安裝說明書

RR. LOWER LATERAL BRACE

後側牛腿拉桿


#Q0388

Application 適用車型

Honda CR-V '12-16

Components 內含配件

- | | |
|-----------------------------|------|
| ① Brace-RH 結構桿-右..... | 1pcs |
| ② Brace-LH 結構桿-左..... | 1pcs |
| ③ Bolt 螺絲 (M8x1.25x30)..... | 4pcs |
| ④ Washer 華司 (26x8.4x2)..... | 4pcs |

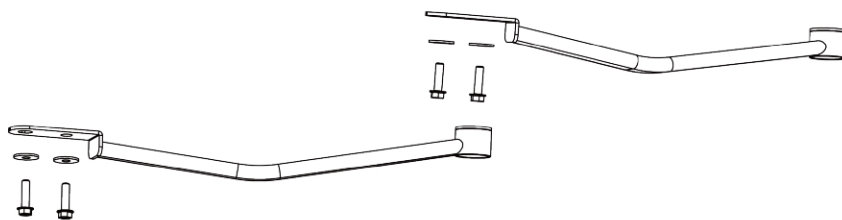

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove the rear trailing arm bushing front bolts on both sides. (See figure 1)
拆卸兩側後拖曳連桿鐵套(牛腿)前端的螺絲。(參考圖表一)
2. Position the RH brace and LH brace on the vehicle.
安裝左側及右側結構桿。



3. Install supplied bolts and washers to front of the brace.
使用配件螺絲及華司鎖上桿身的前端。



▼ Illustration of installed state
安裝完成示意圖

4. Reinstall the trailing arm bushing bolts.
鎖回後拖曳連桿鐵套螺絲。

Torque Specification 上鎖扭力值

Rear trailing arm bushing bolt
後拖曳連桿鐵套(牛腿)螺絲
100Nm