

Installation Instructions

安裝說明書

FRONT LOWER RASDIATOR BRACE

水箱架下拉桿

#Q0798

Application 適用車型

Suzuki Vitara '15- (LY)

Components 內含配件


- | | |
|---------------------------------|------|
| ① Center bar 中間桿..... | 1pcs |
| ② Bracket-RH 右側支架..... | 1pcs |
| ③ Bracket-LH 左側支架..... | 1pcs |
| ④ Bolt 螺帽 (M10x1.25x25-7)..... | 4pcs |
| ⑤ Nut 螺帽 (M10X1.25-14x9.5)..... | 4pcs |
| ⑥ Washer 華司 (25.4x10.3x3)..... | 4pcs |

Caution 注意事項


- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全，安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置，有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲，如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明


1. Remove front bumper and lower deflector.
將前保險桿及下護板拆下。
2. Cut out the inner plastic deflector on both sides. (See photo 1)
參考圖一，將兩側塑膠導風板依照紅色虛線切除。

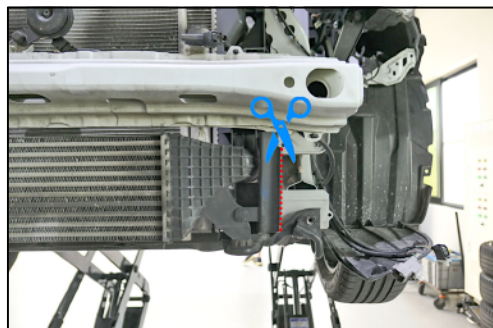


3. Remove the lower radiator support mounting bolts above tow hooks.
將下水箱架拖車勾上方的固定螺絲拆下。
4. Remove the crash beam mounting bolts.
Do not need to reamove the crash beam.
將內鐵支架固定座的螺絲拆下，內鐵支架不用拆下。

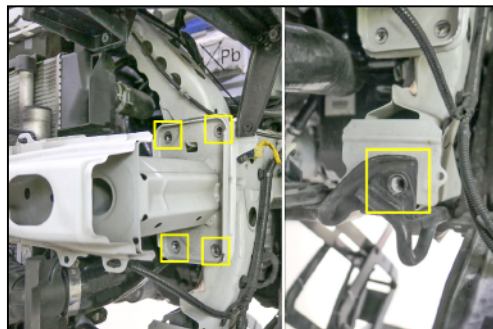

5. Install supplied washers between frame rail and the upper two crash beam mounting holes. Then reinstall the factory bolts.
將附件華司置入車體大樑及內鐵支架間的上端鎖點，完成後沿用原廠螺絲將內鐵鎖上。

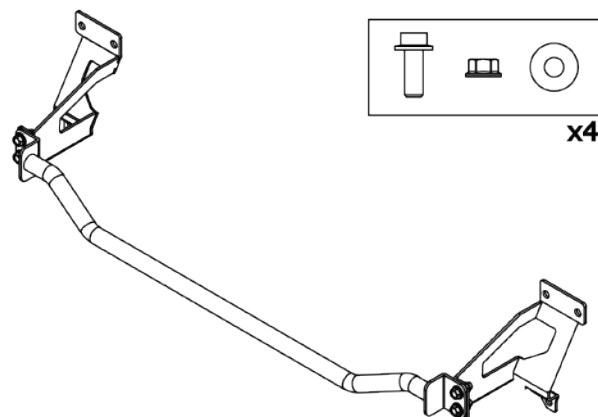

6. Install supplied brackets between frame rail and the lower two crash beam mounting holes. Then reinstall the factory crash beam and lower radiator support bolts to secure the brace.
將附件支架置入車體大樑及內鐵支架間的下端鎖點，完成後沿用原廠內鐵及下水箱架螺絲將支架鎖上。

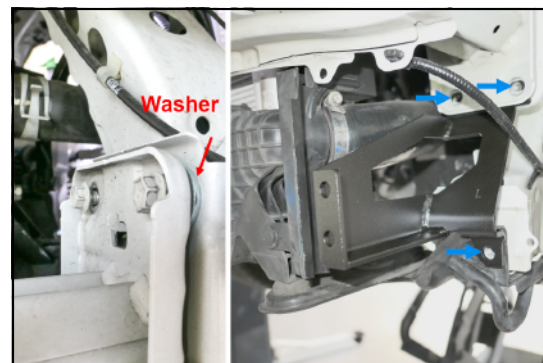

7. Install the center bar using supplied M10 bolts and nuts.
使用附件M10螺絲及螺帽，將中間桿安裝至兩側支架。
8. Reinstall front lower deflector and bumper.
將前下護板及保險桿裝回車輛。

