

Installation Instructions 安裝說明書


FRONT TOW HOOK ADAPTER
前拖車鉤支架
#Q0722

Application 適用車型

Honda Civic FK8 (TYPE-R)

Components 內含配件

- ① Tow Hook Adapter 拖車鉤支架.....1pcs
- ② Bolt 螺絲(M10x1.25x40).....2pcs

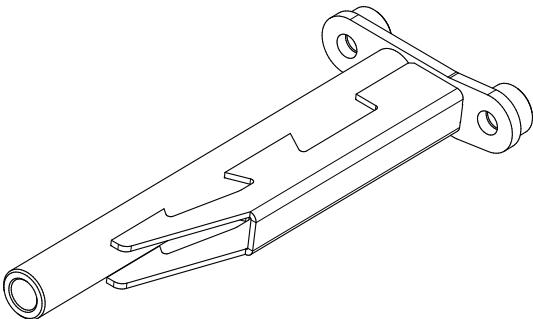


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全，安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置，有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲，如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove the front bumper and the two bolt where the red arrow point. (move the horn position)

將前保險桿拆卸後在車頭右前方喇叭位置後方，將保險桿內鐵支架下方兩顆紅圈處螺絲拆卸 (將喇叭鎖點位置稍微移開)。

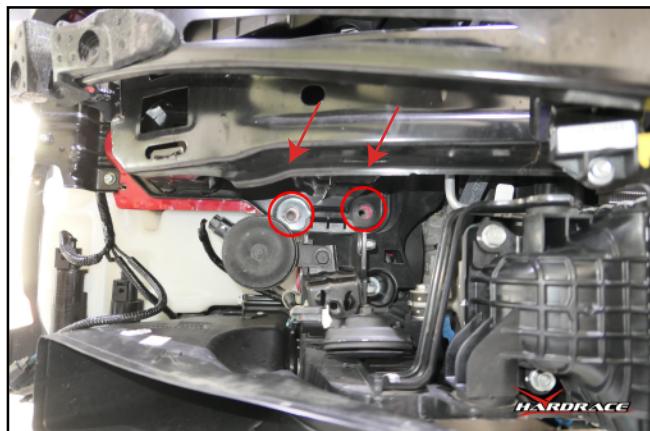

3. If you want to keep the honeycomb bumper. You need to cut a hole at the front of the hook adapter.

保險桿外觀蜂網狀拖車鉤位置，需切除剪開一個孔洞。



2. Using M10x1.25x40 bolt screw on the hook adapter.

(Torque Value: 70-80 Nm)

將內附配件螺絲 M10x1.25x40外六角螺絲，鎖上拖車鉤支架。
(鎖付扭力 N.m : 70-80)



4. You can install the OE style, or other type of tow hook.

可將原車附上之拖車鉤鎖上或是添購其他類型之拖車環
拖車帶，改變不同安裝風格。

