

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#Q0606

Application 適用車型

TOYOTA SUPRA 5th J29/A90 2019-present

Components 內含配件

- ① Strut brace 拉桿1pcs
- ② Bolt - hex button head 內六角半圓頭螺絲 (M10x1.5x30).....2pcs
- ③ Bolt - hex button head 內六角半圓頭螺絲 (M8x1.25x60).....2pcs
- ④ Nut - Flange 凸緣螺帽 (M8X1.25-12x7.5)...2pcs
- ⑤ Washer 華司 (16x8.4x1.4).....6pcs

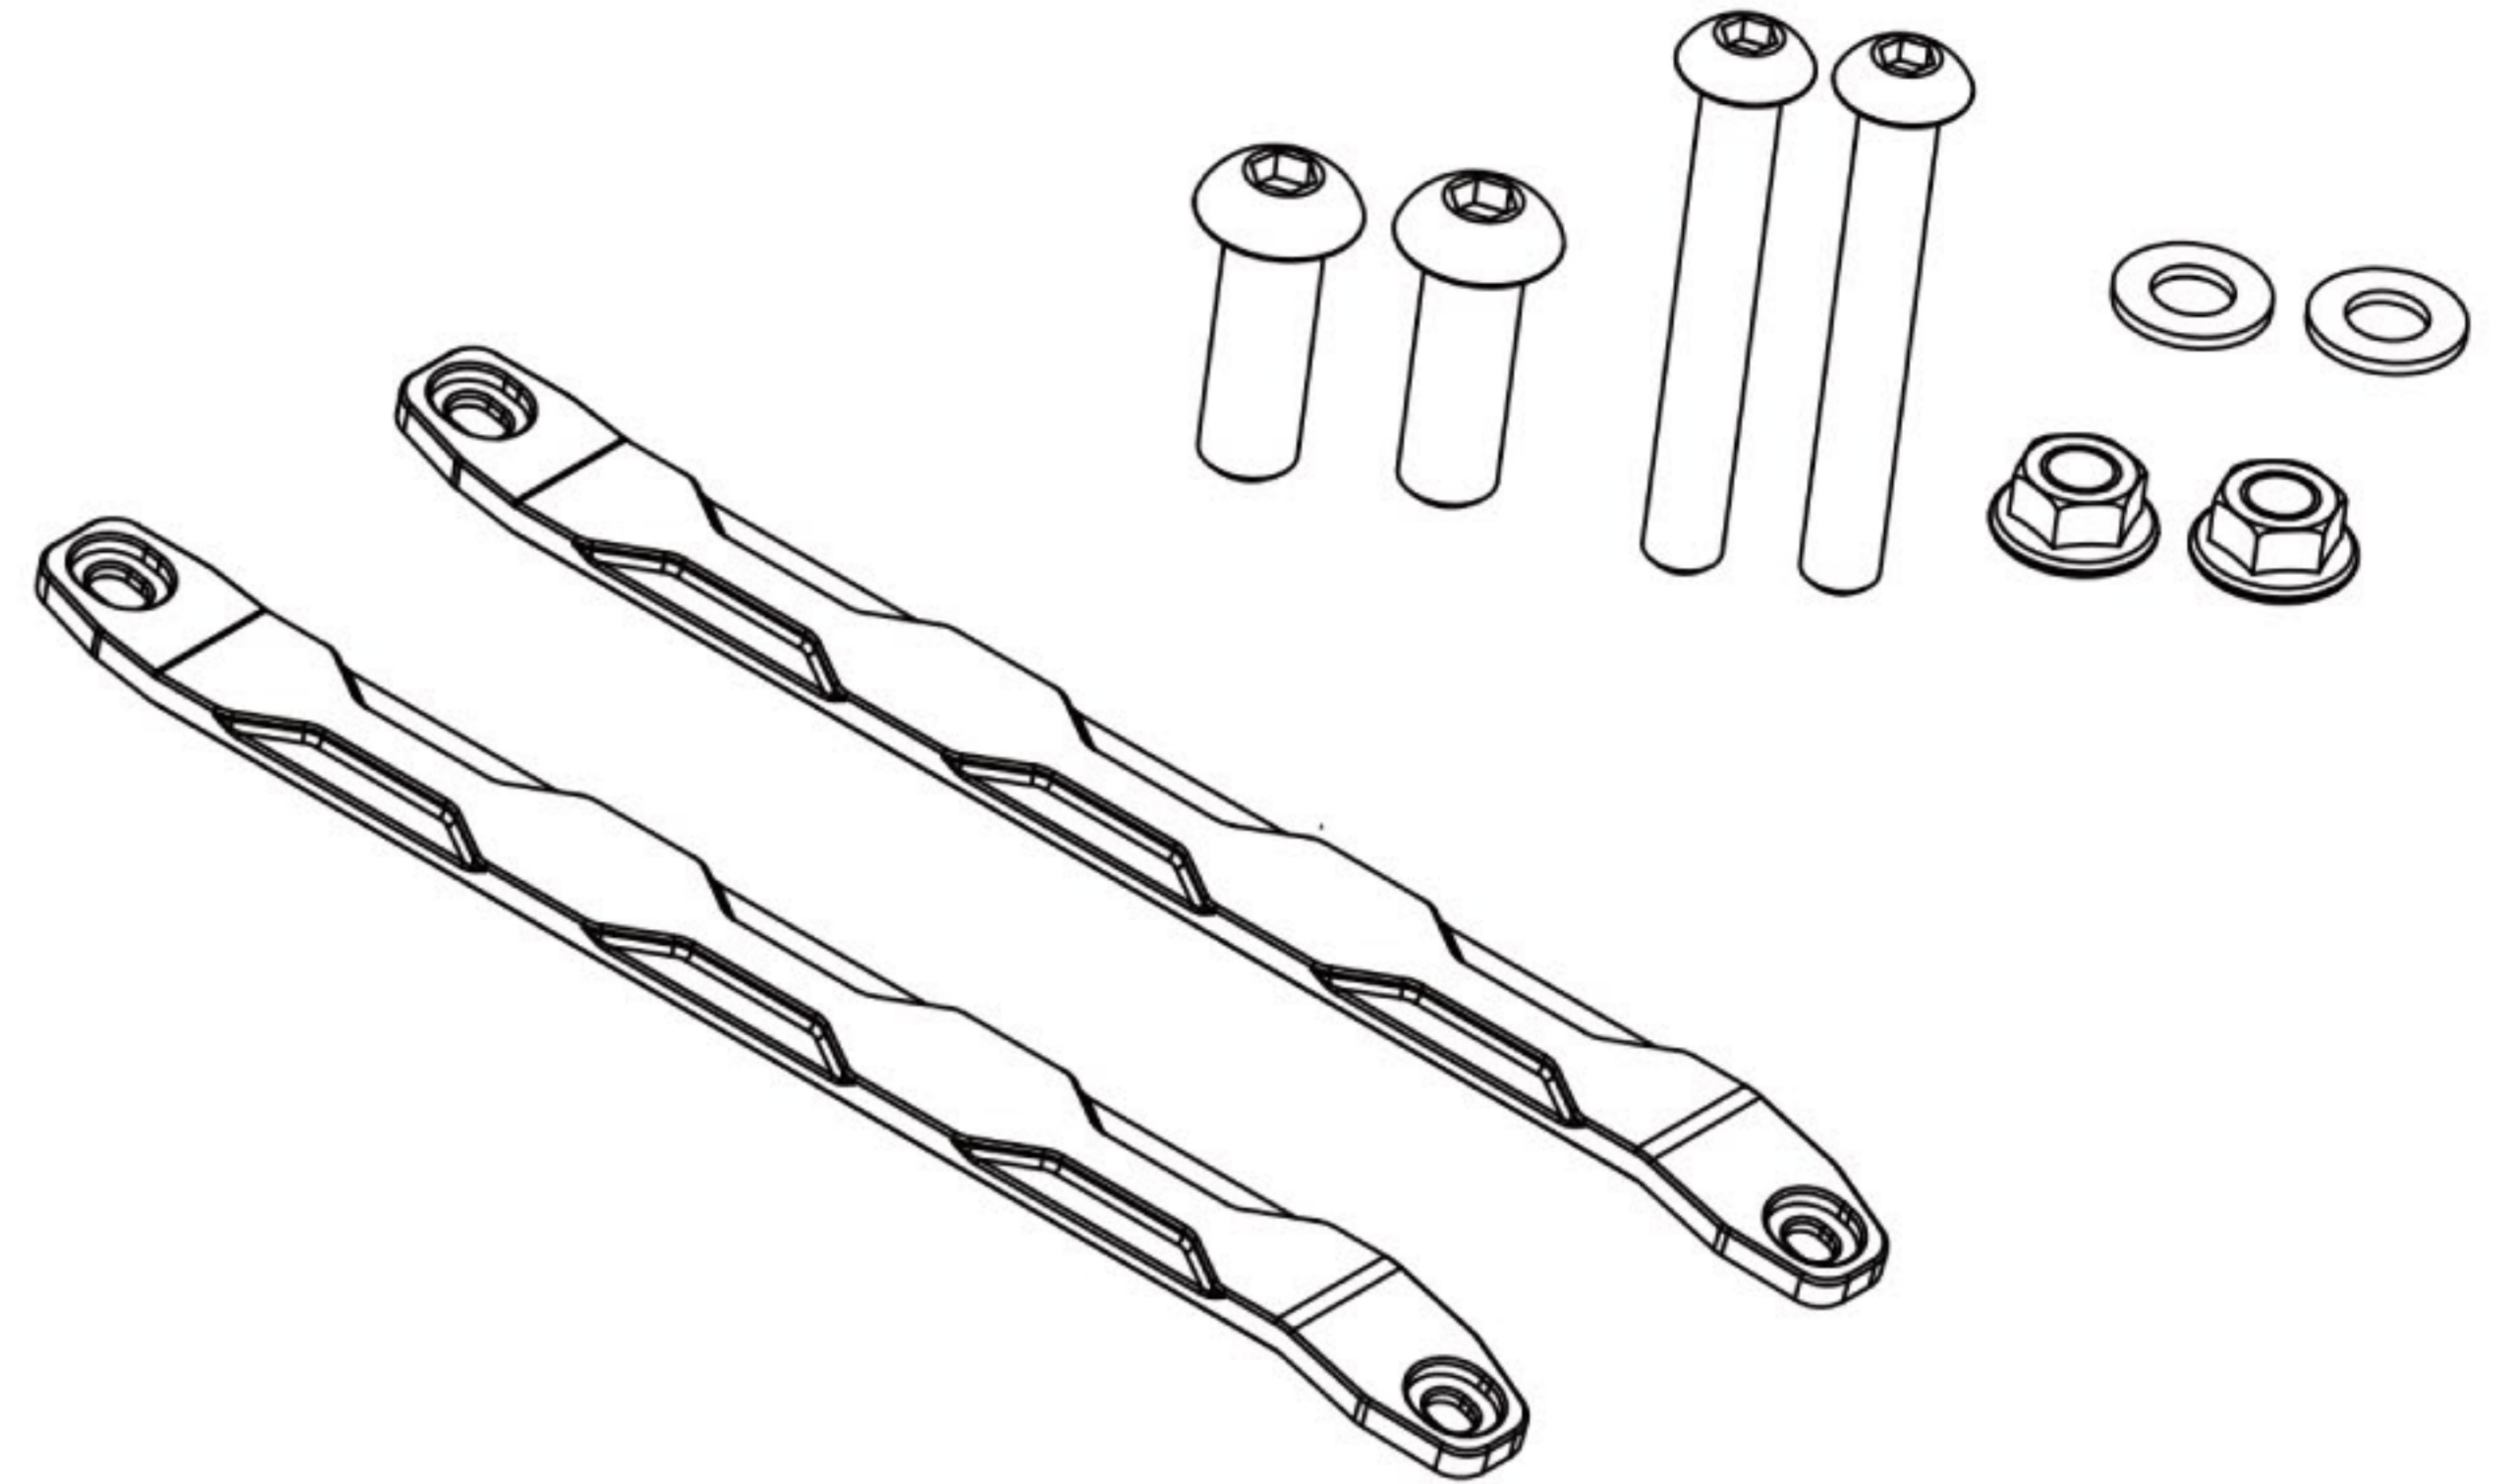


Caution 注意事項



- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全，安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置，有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲，如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Front (Radiator support) Side → M10 hardware
前水箱架端 → 使用M10螺絲安裝

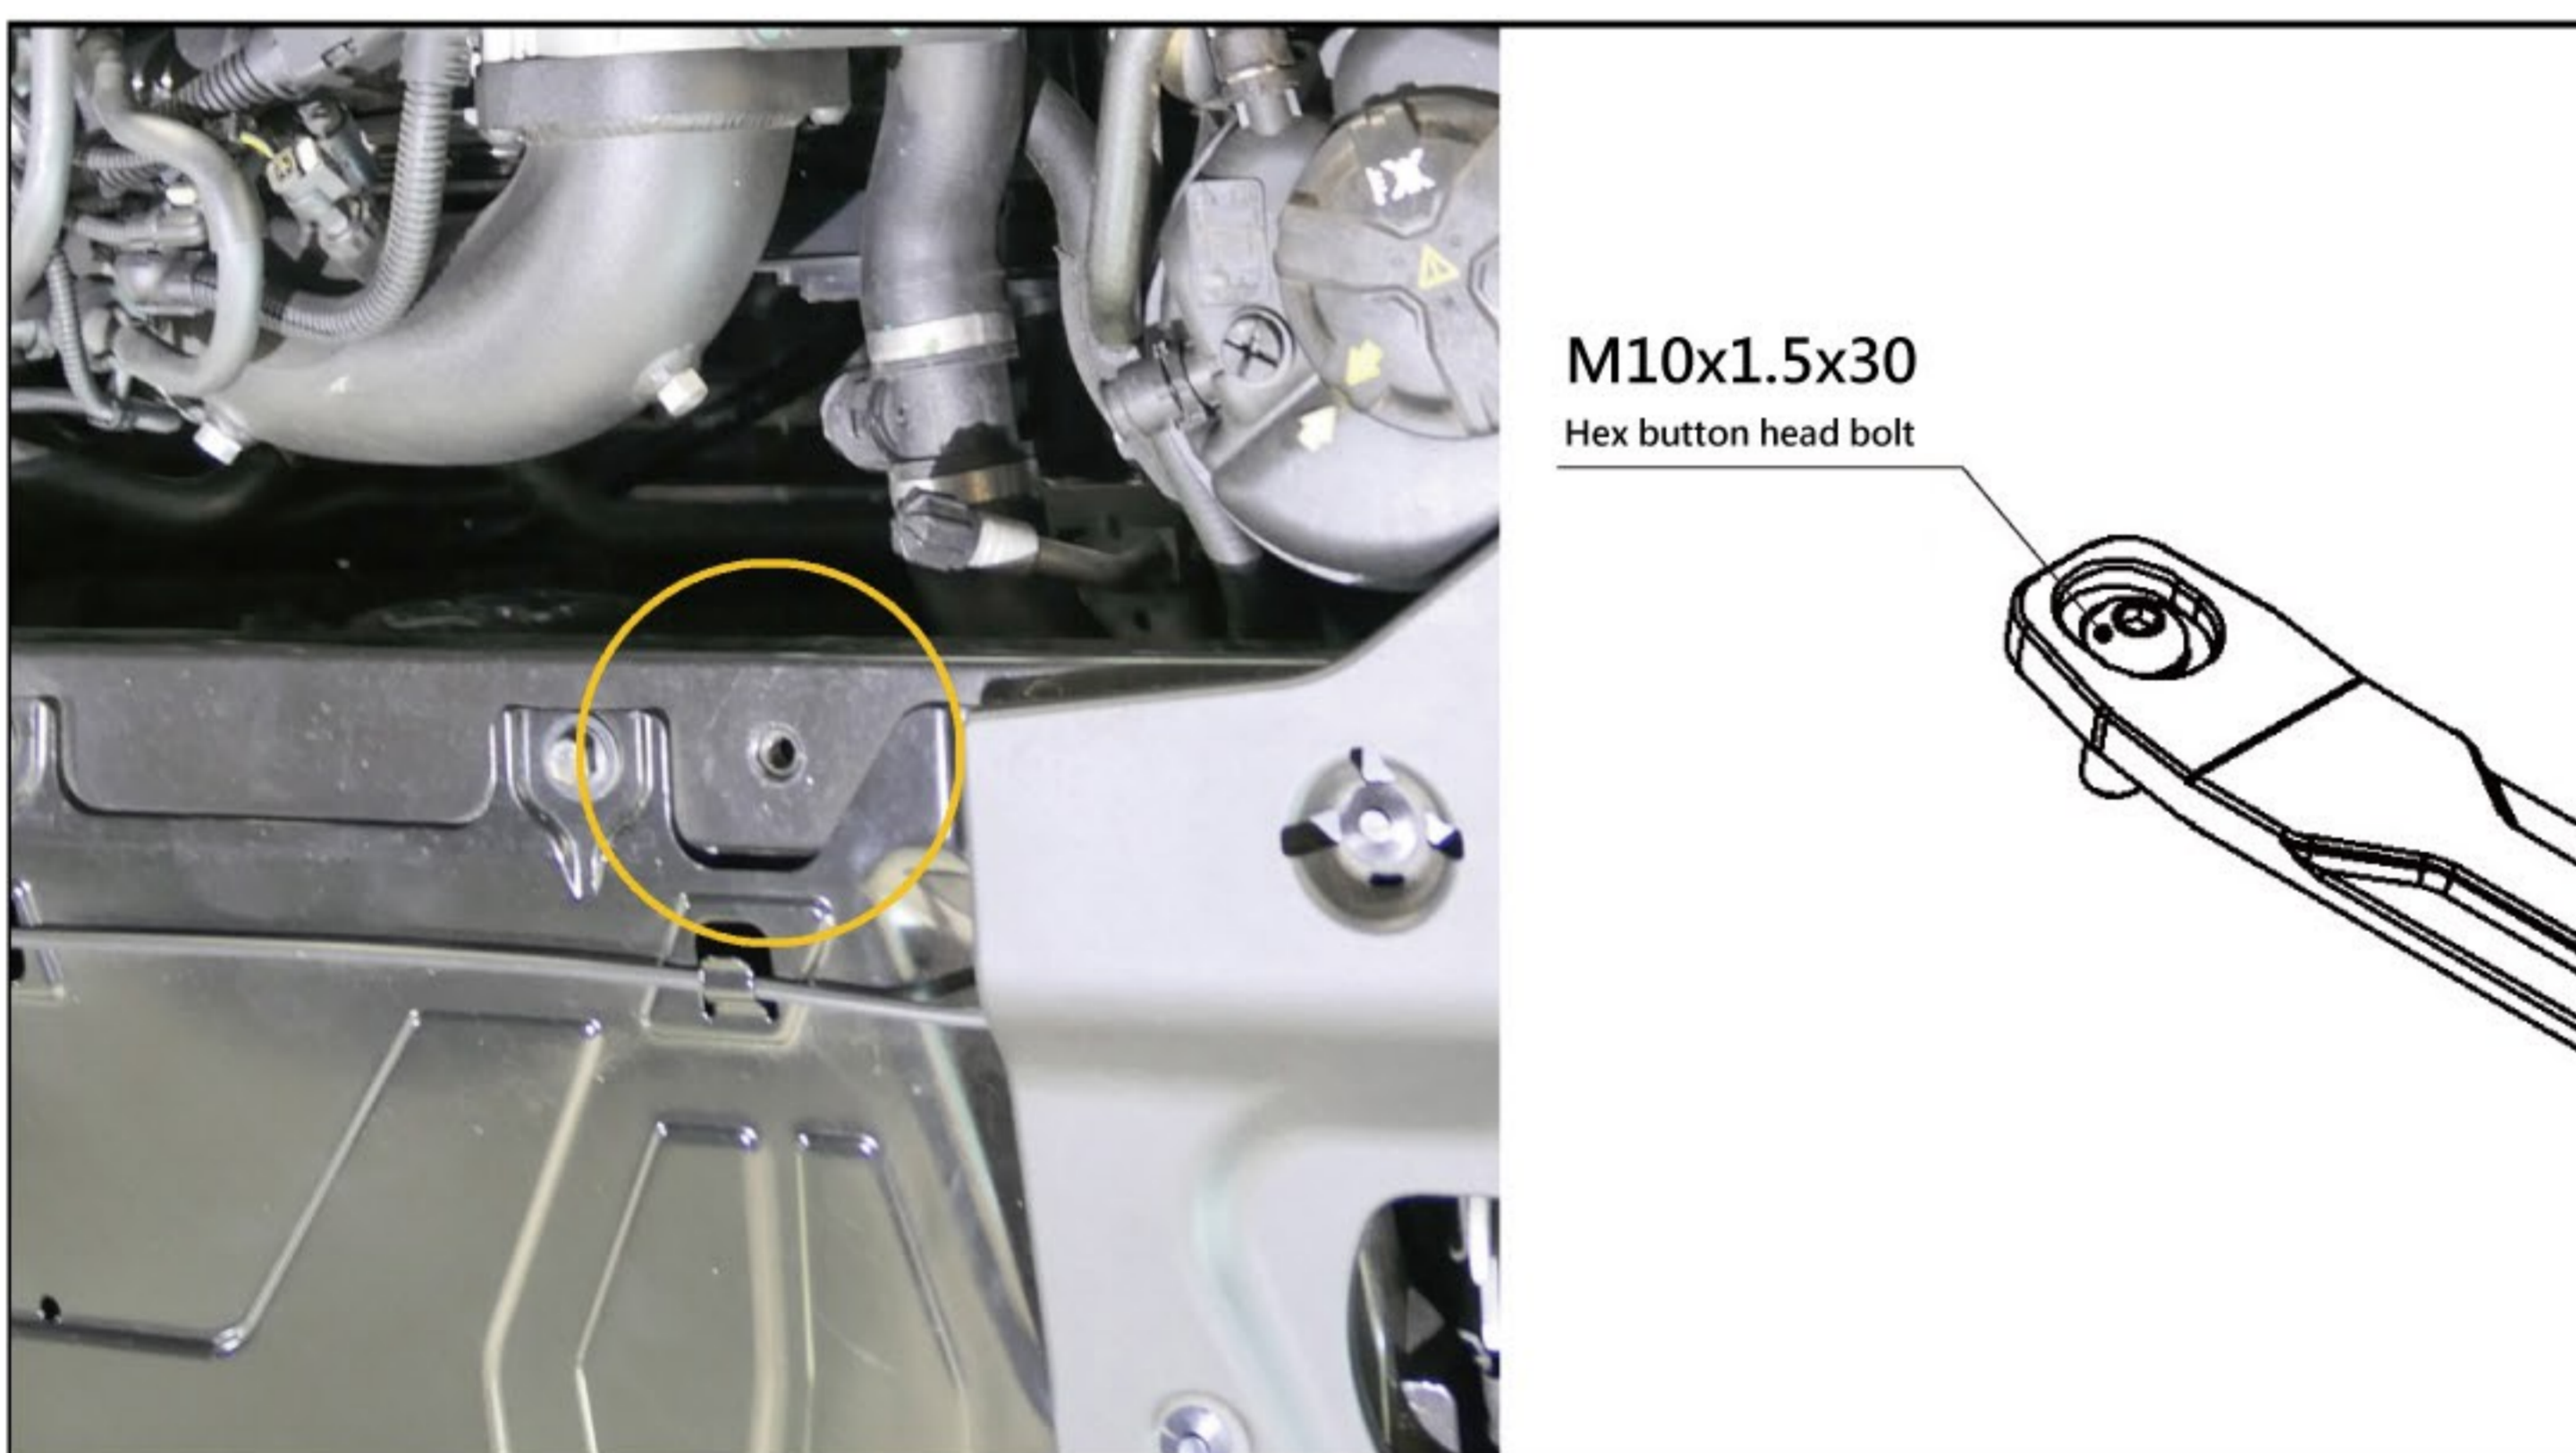

2. Rear (Strut tower) Side → M8 hardware
後避震塔端 → 使用M8螺絲及配件安裝

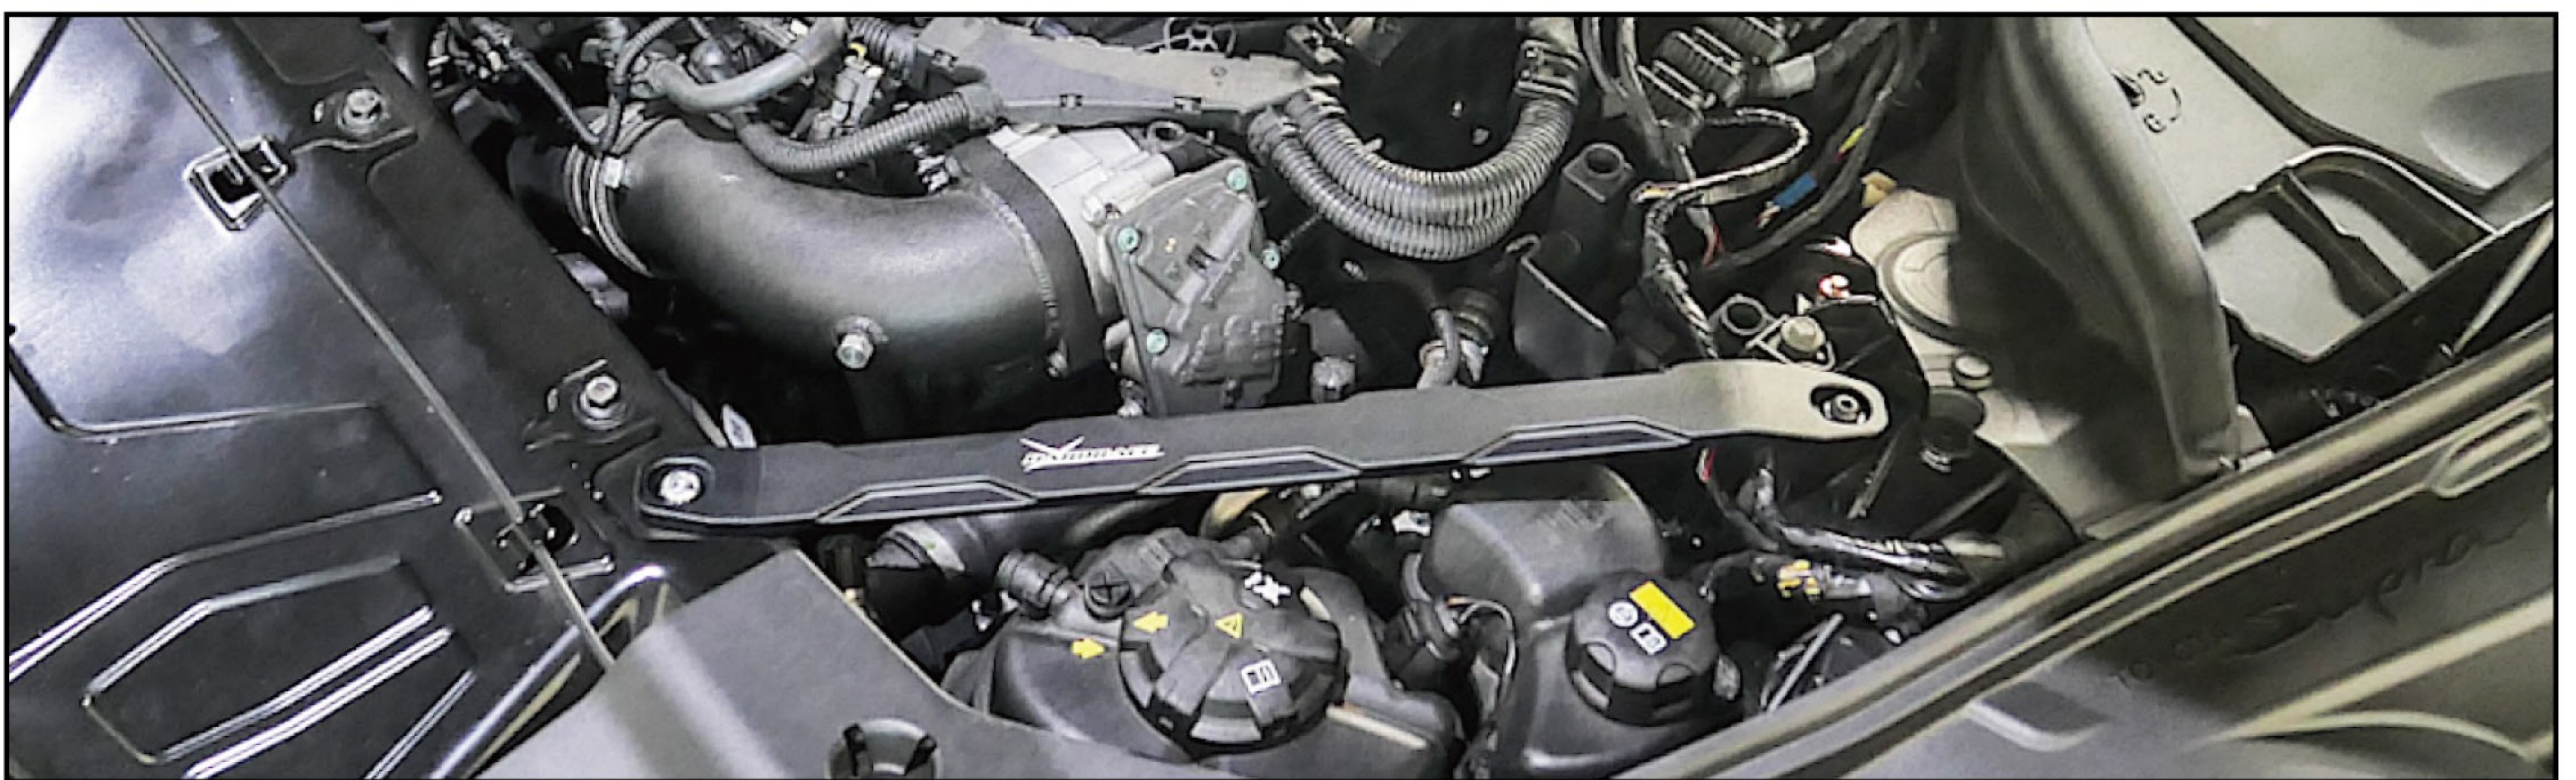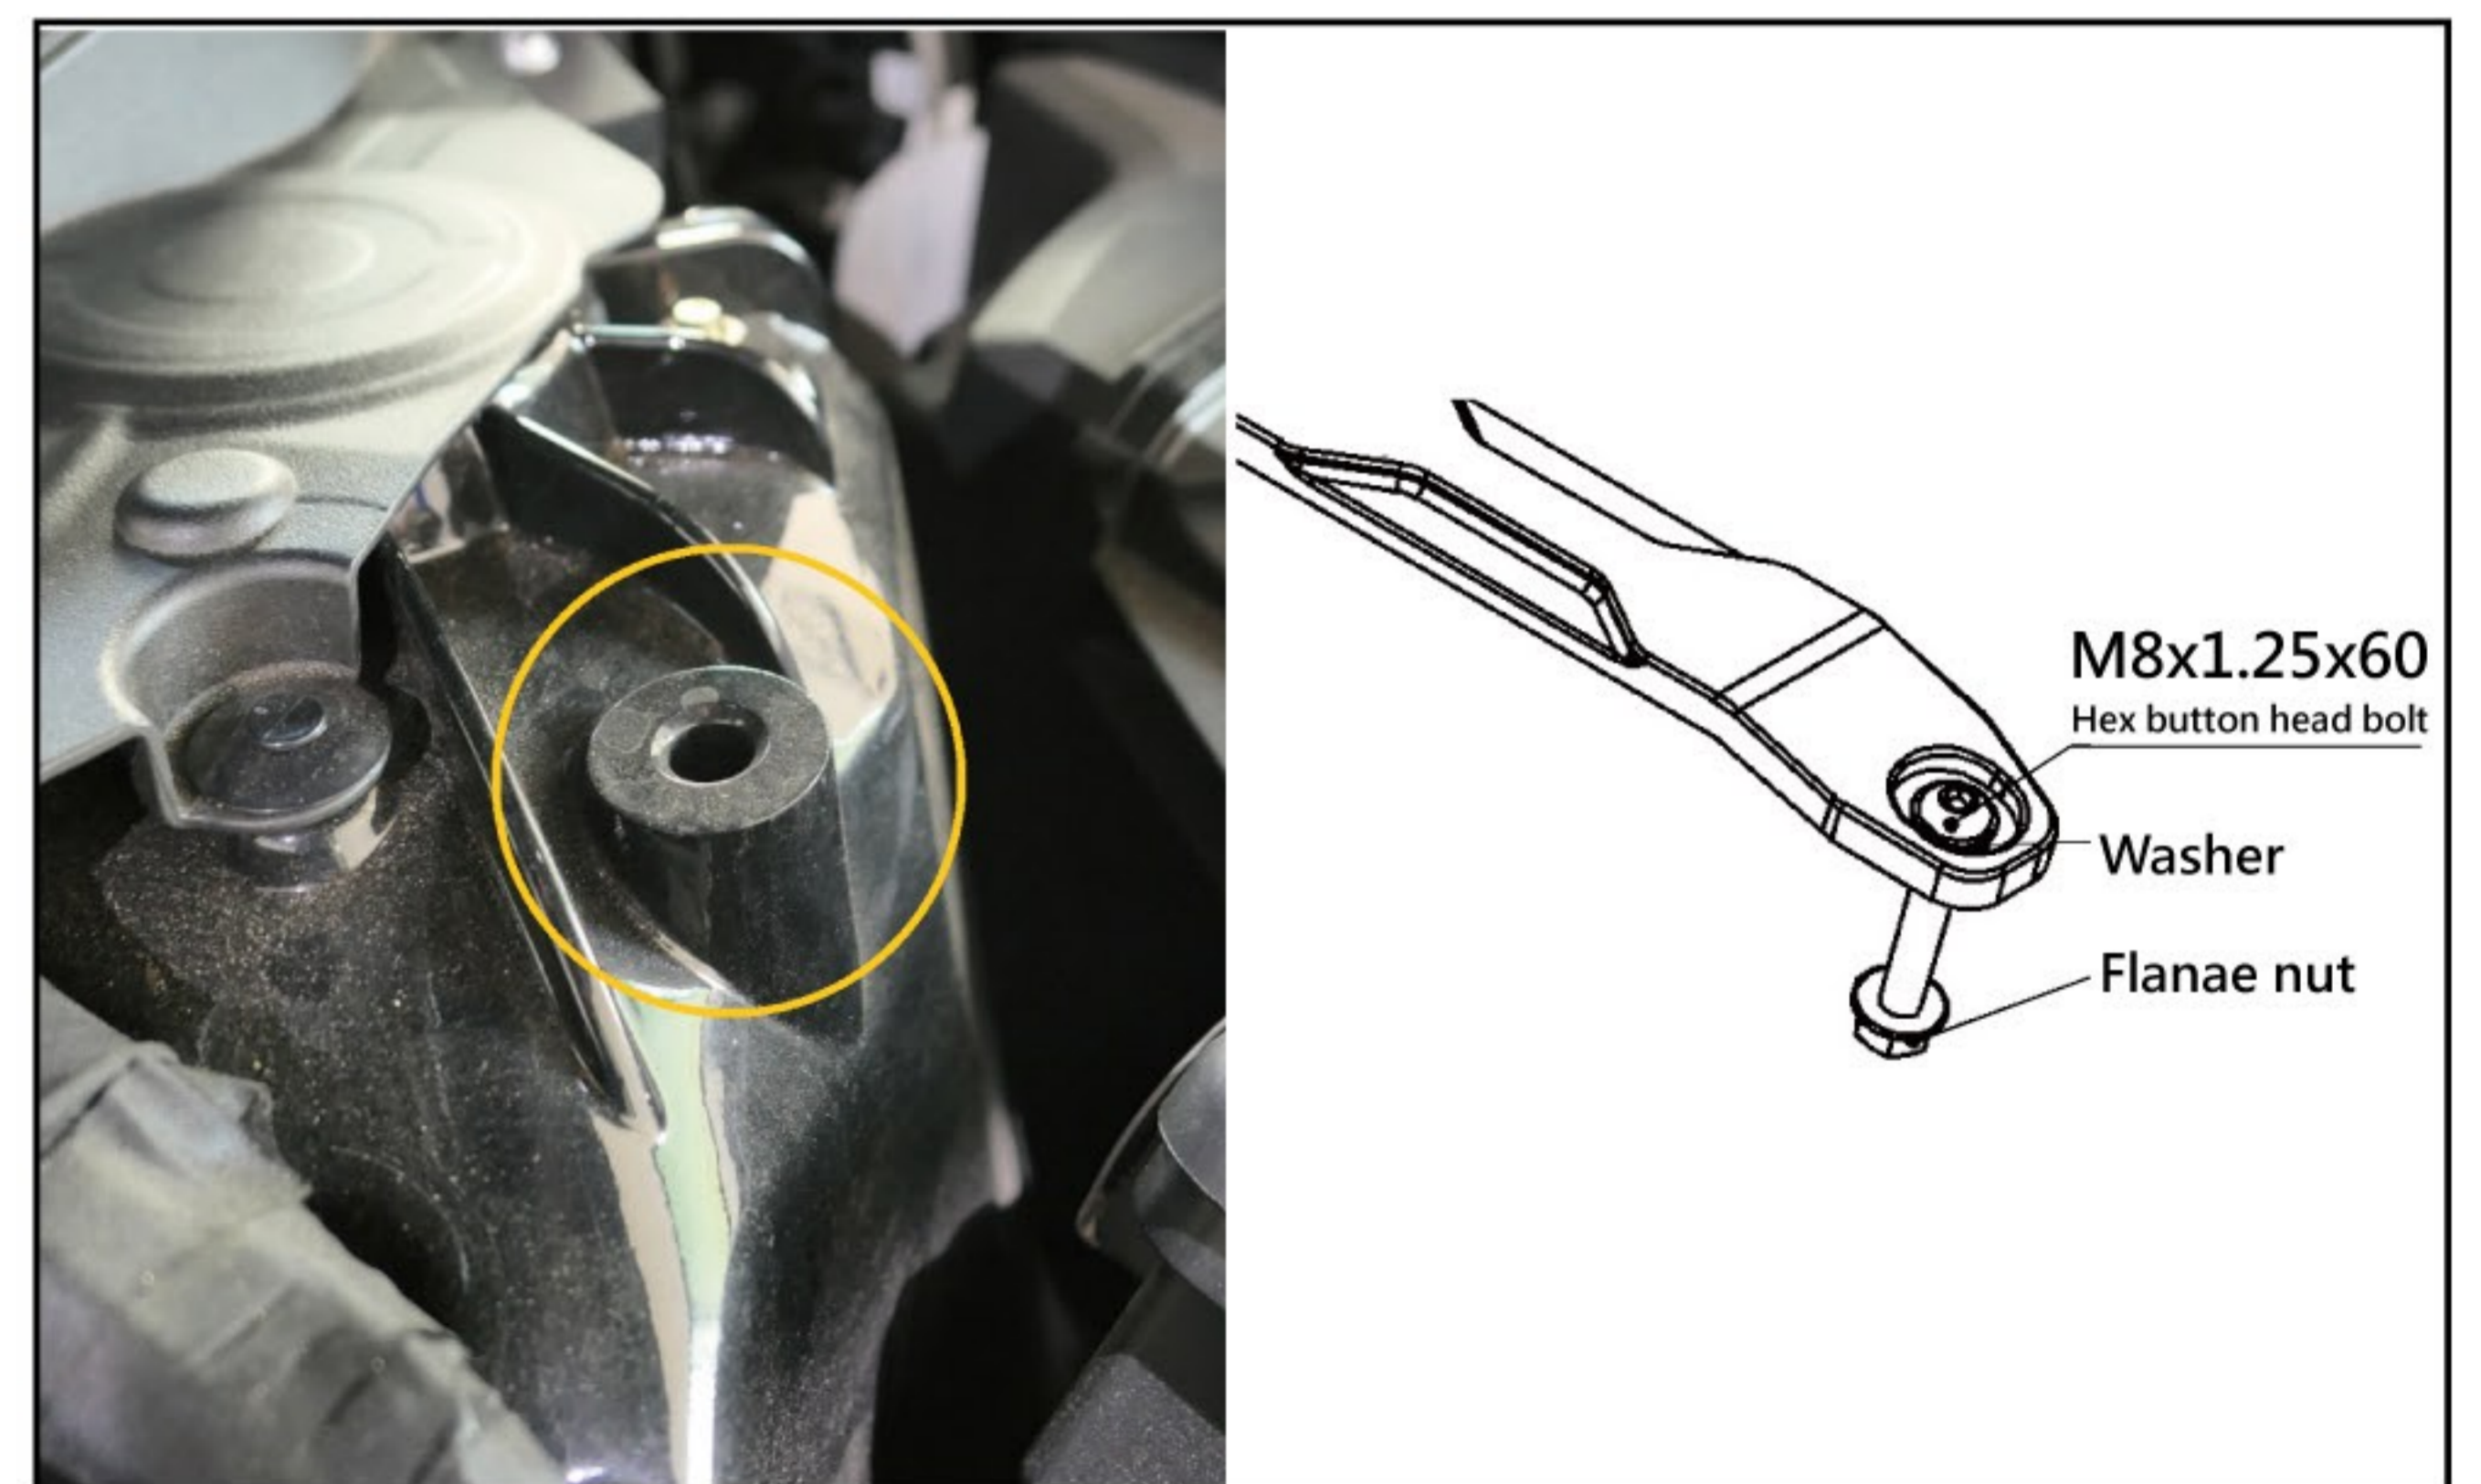

▶ Illustration of installed state 安裝完成示意圖