

Installation Instructions

安裝說明書

FRONT SWAY BAR

前防傾桿

#8507

Application 適用車型

HONDA CIVIC 5th 1992-1996 EG, EH, EJ1/2

HONDA Del Sol EG1/2 1992-1998

Components 內含配件

- ① Sway bar 防傾桿桿身.....1pcs
- ② Bushing 橡皮.....2pcs
- ③ Bracket 固定環.....2pcs
- ④ Mounting plate 固定環底座.....2pcs
- ⑤ Bolt - Flange 凸緣螺絲 (M8x1.25x20).....2pcs
- ⑥ Nut - Flange 凸緣螺帽 (M8x1.25-12x7.5).....2pcs

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Install the bushings and brackets to the new sway bar

將橡皮及固定環先組裝至防傾桿桿身。

2. Install the sway bar and supplied mounting plate to the vehicle using supplied hardware.

使用附件的螺絲及螺帽，將防傾桿連同附件底座鎖至車體。

3. Reinstall sway bar end link.

將防傾桿連接桿裝回。

Note 提示

- ※ 90° ball joint type end links required, or see #6480
- ※ 李仔串若原為橡皮型，須換為一端90度球頭型，或見#6480
- ※ LCA with end link mounting holes required for non sway bar equipped cars, or see #6247
- ※ 原無配備防傾桿車型須更換附李仔串鎖孔的三角架，或見#6247

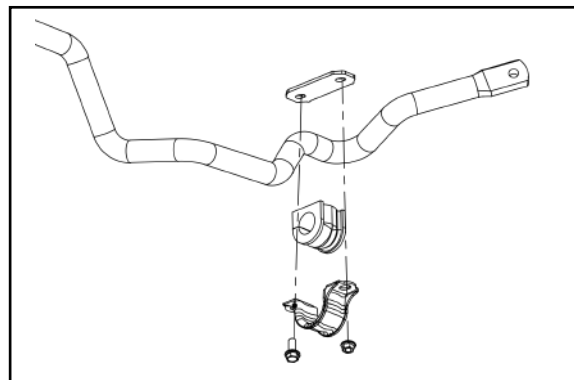
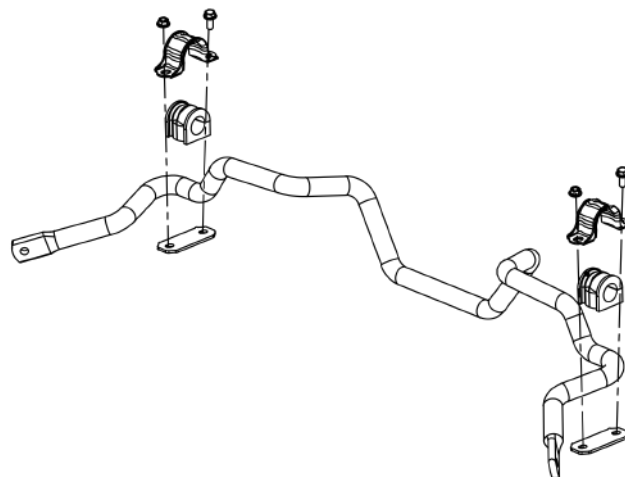


Illustration of installed state 安裝完成示意圖