

Installation Instructions

安裝說明書

FRONT RADIUS ARM OFFSET BUSHING

前下連桿偏心鐵套

#Q0324


Application 適用車型

Mercedes-Benz G-Class W460/W461/W463
'79-present

Components 內含配件

① Offset bushings 偏心鐵套

4pcs

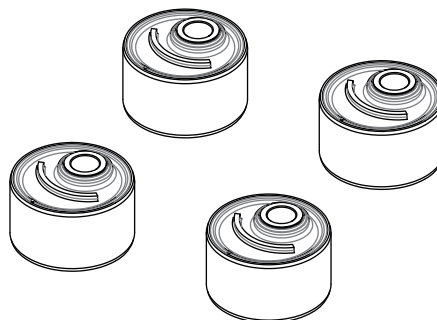

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove front radius arms from the vehicle on both sides.
將原廠前控制臂拆下。
2. Note down the measurements between the center of two factory bushings.
測量並記下兩原廠鐵套的中心孔距。
3. Press supplied Offset bushings into the front bores. Please make sure the the bushings are offset toward the top of the arms. (See figure 2)
將 偏心鐵套 壓入前端鐵殼中，請注意壓入時須將鐵套的偏心孔位對準桿身的頂端。(參考圖表二)
4. Press in the rear bushings with the offset positioned toward downside.
Please make sure the distance between the two offset bushing should be the same with previous measurement, and bushings in both arms should be identical as well.
將後端鐵套以中心孔對準下方壓入，壓入時請確認前後偏心鐵套中心孔距須與先前測量的原廠前後鐵套中心距等長，且左右控制臂鐵套位置須相吻合。
5. Reinstall radius arms to the vehicle.
鐵套安裝完成後將前控制臂裝回車輛。

