

Installation Instructions

安裝說明書

REAR SUBFRAME ANTI-VIBRATION INSERT

後車身制震墊片

#Q1013

Application 適用車型

BMW 5-Series F10/F11 (exclude M5)
BMW 5-Series GT F07
BMW 6-Series F06/F12/F13 (Exclude M6)
BMW 7-Series F01/F02

Components 內含配件


- ① Front Insert 前端墊片.....2pcs
② Rear Insert 後端墊片.....2pcs

Caution 注意事項


- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

- ▼ Install supplied inserts to indicated location of rear subframe.
請根據墊片上標示文字，將墊片安裝至後大樑/副車架標示位置。

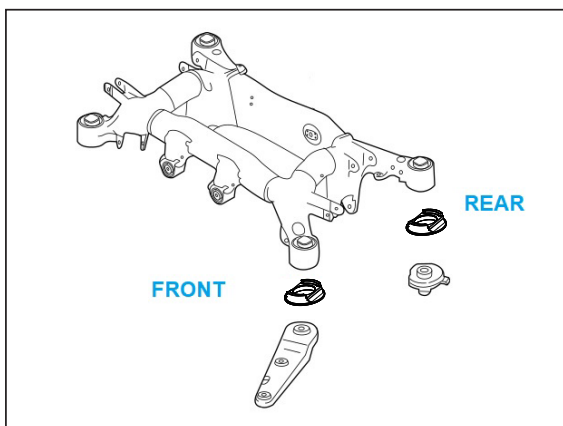

2. Place the inserts into the voids of subframe bushings.
將制震墊片置入副車架鐵套孔中。

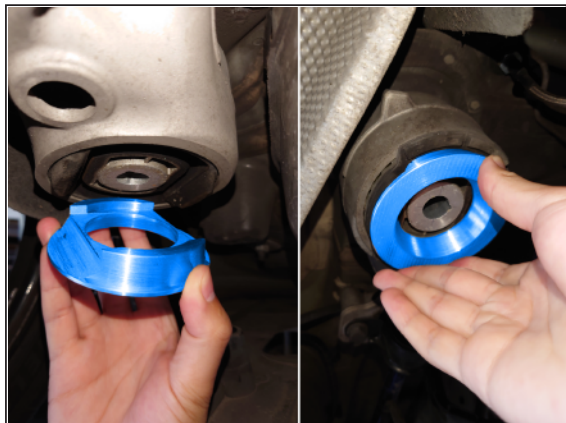

1. Remove factory metal plate from the rear subframe bushings.
將原廠後副車架鐵套上的墊片拆下。



3. Reinstall the metal plate to the subframe bushings.
將原廠後副車架鐵套墊片裝回。

